


* HOW TO INSTALL RFID CARD


[CX TYPE]

1

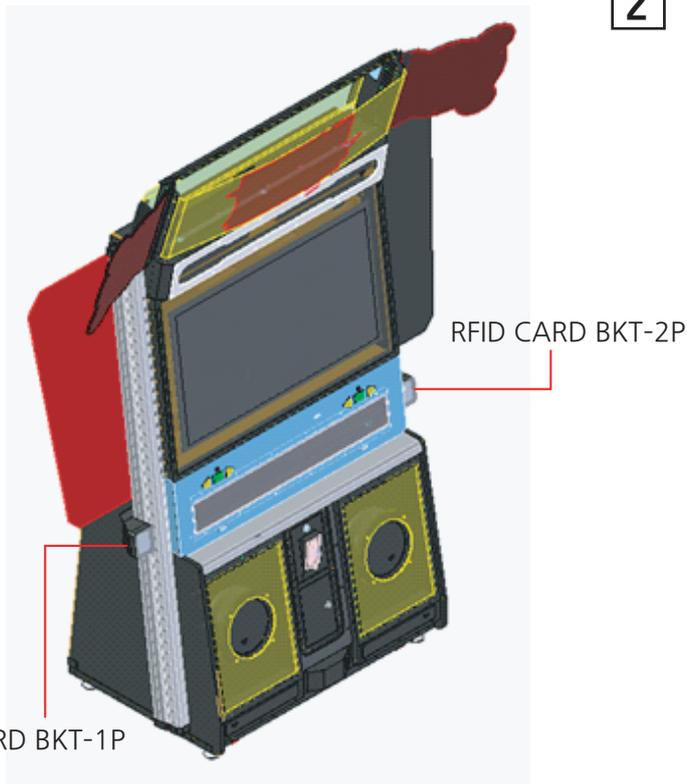

- Location of PUMP RFID Card BKT.

2

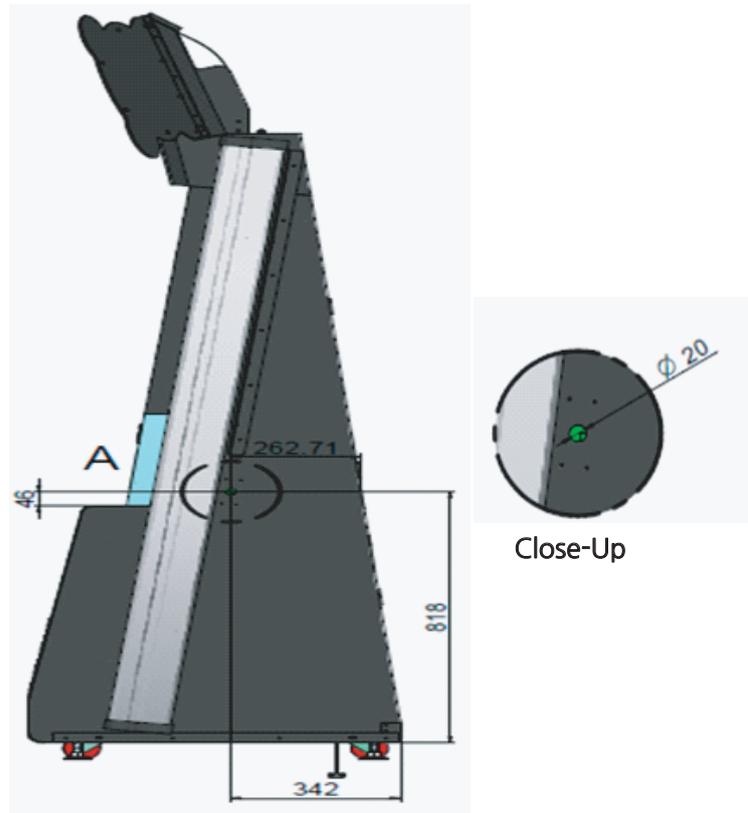


- Make a hole for USB Cable and then install the BKT.

* Sequence of installation & Precautions


- 1) Be sure to work after turning the power off.
- 2) Be sure to secure sufficient working space and block the approach of people other than worker.
- 3) Before making the side hole, be careful with the internal electric wires not to be damaged.
- 4) Before making the side hole, double-check the location of the holes to make.
- 5) Be careful not to damage the machine and not to get injured.
- 6) Be sure to clean up both inside and outside after working.

3

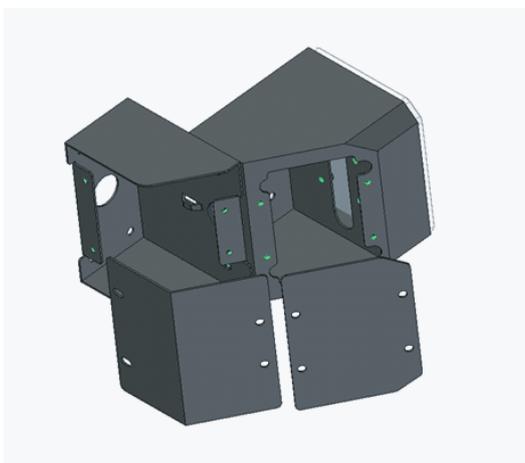


- After removing the cover, assemble the RFID Card BKT to the holes shown in the photo #1
In case of existing machines, fix the approximate location due to no indication of assembly point.

4

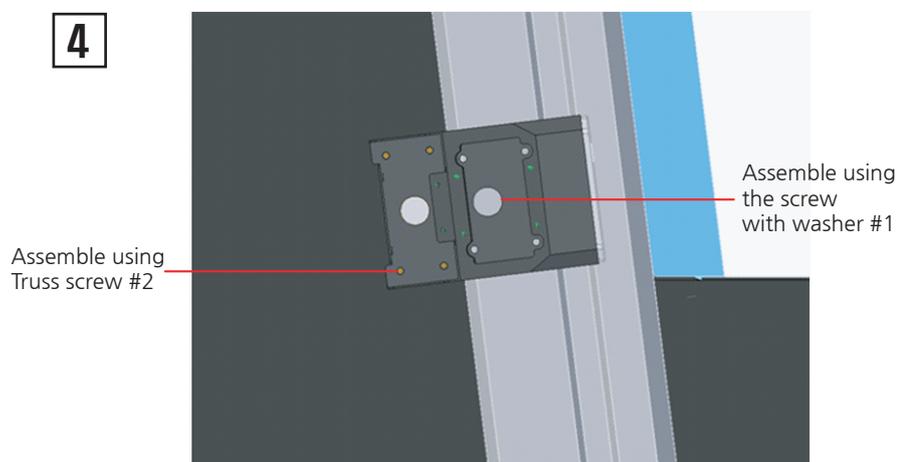

- Assemble the BKT using the bolts included.
#1 : Screw with washer (#8 x 13mm) - 4EA
#2 : Truss screw (M4 x 12mm) - 4EA


5

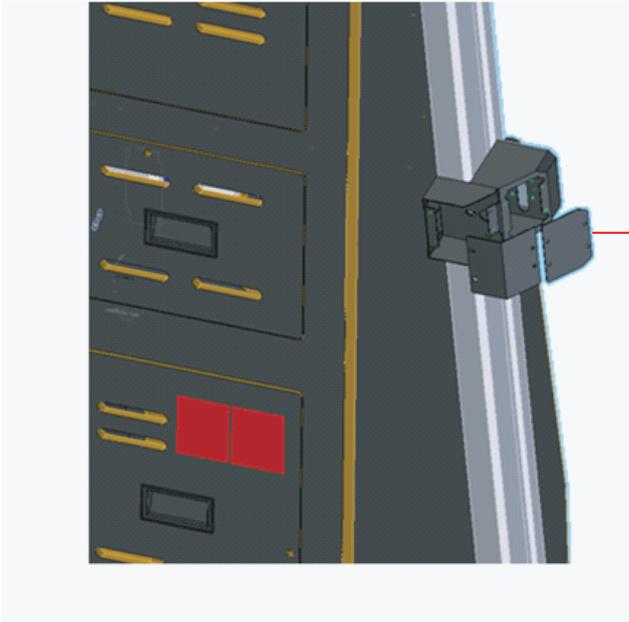

Installation of Cover

- Installation of the Cover BKT.

6

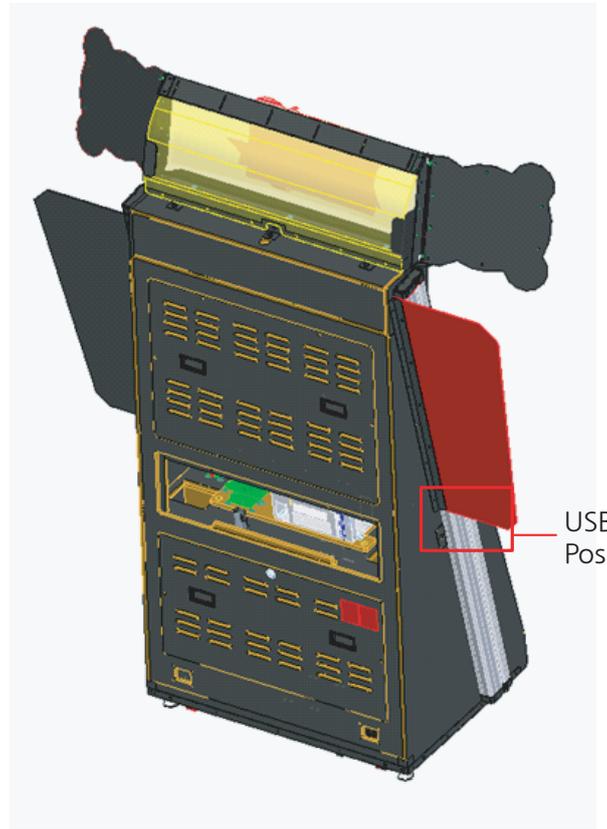


USB HUB Position

- Location to install USB HUB


* Due to no indication of assembly point, fix the approximate location as shown in the photo and assemble the USB HUB using the bolts included (Truss Screw: (M4 x 12mm) - 2ea).
Make a hole to put electric wires.

7

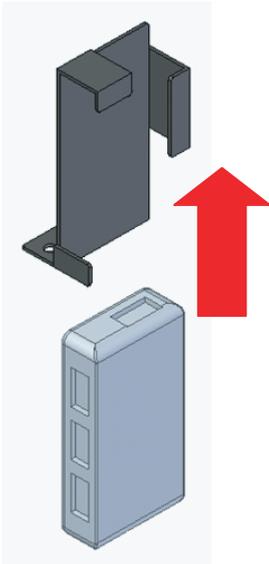

- Install the USB into USB HUB BKT by inserting it to the arrow direction as shown in the photo.

8

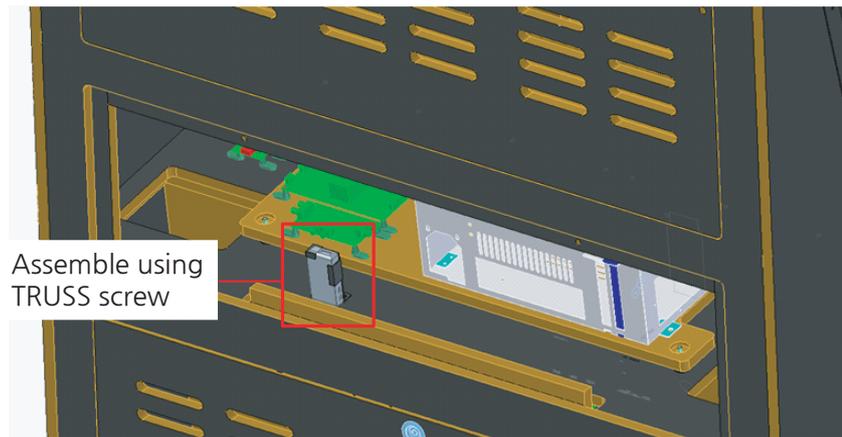


Assemble using TRUSS screw

- Connect the power adaptor included in HUB from outside.
- Connect MK Box and HUB using the USB cable included.
- Connect USB cable of 1P and 2P from RFID Card Reader BKT to the HUB Port respectively.


[TX TYPE]

1

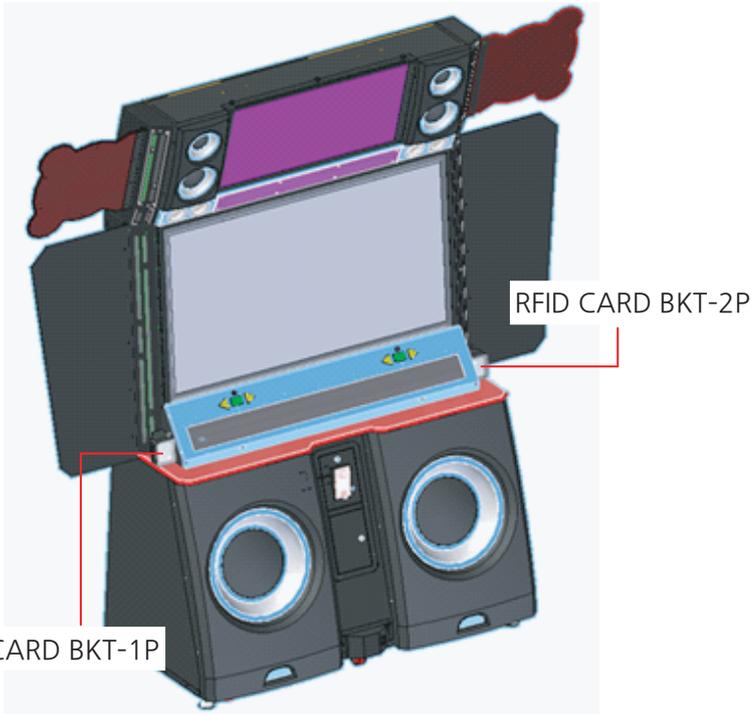

- Location of PUMP RFID Card BKT.

2

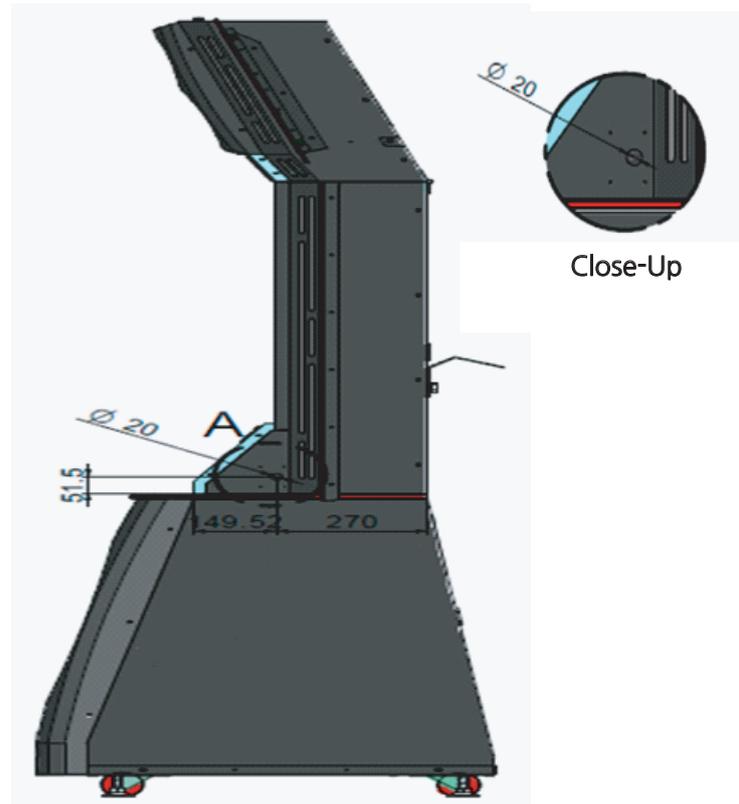


- Make a hole for USB Cable and then install the BKT.

* Sequence of installation & Precautions


- 1) Be sure to work after turning the power off.
- 2) Be sure to secure sufficient working space and block the approach of people other than worker.
- 3) Before making the side hole, be careful with the internal electric wires not to be damaged.
- 4) Before making the side hole, double-check the location of the holes to make.
- 5) Be careful not to damage the machine and not to get injured.
- 6) Be sure to clean up both inside and outside after working.

3

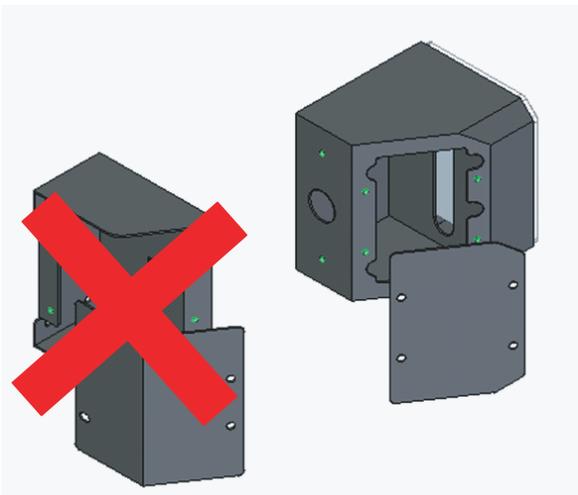


- After removing the cover, assemble the RFID Card BKT to the holes shown in the photo #1. Dismantle the back-side bracket from the bracket included and use only front bracket.

4

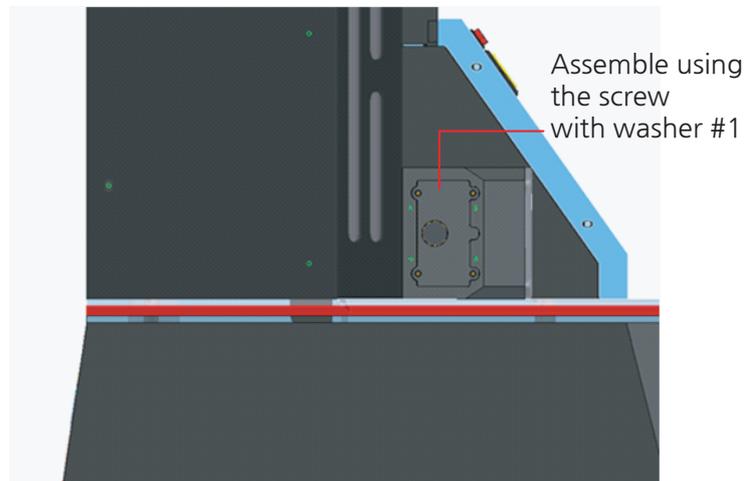


- Assemble the BKT using the bolts included.
 #1 : Screw with washer (#8 x 13mm) - 4EA
 #2 : Truss screw (M4 x 12mm) - 4EA

5

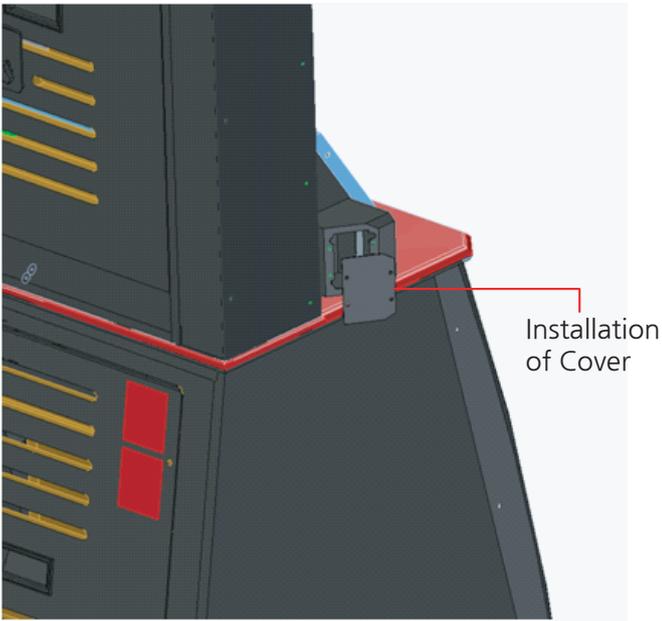

- Installation of the Cover BKT.


6

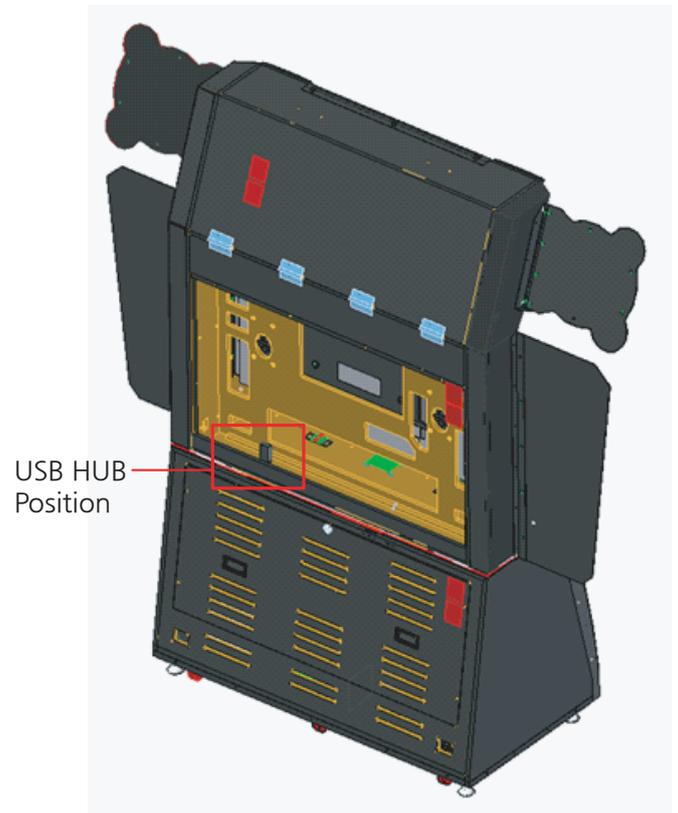

- Location to install USB HUB


* Due to no indication of assembly point, fix the approximate location as shown in the photo and assemble the USB HUB using the bolts included (Truss Screw: (M4 x 12mm) - 2ea).
Make a hole to put electric wires

7

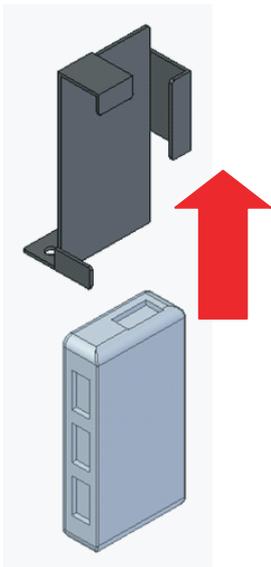

- Install the USB into USB HUB BKT by inserting it to the arrow direction as shown in the photo.


8

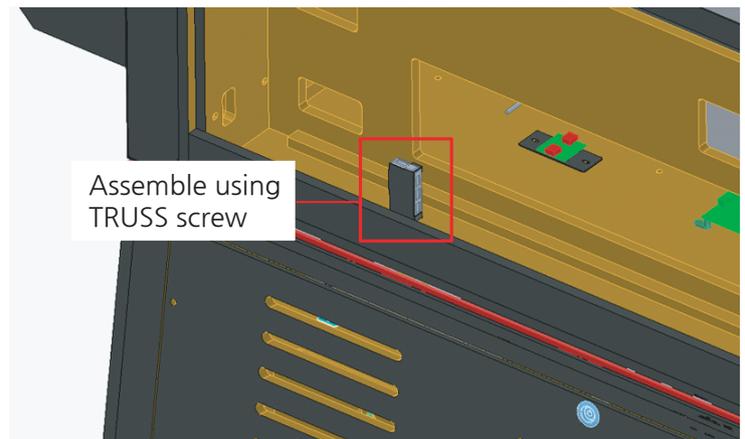

- Connect the power adaptor included in HUB from outside.
- Connect MK Box and HUB using the USB cable included.
- Connect USB cable of 1P and 2P from RFID Card Reader BKT to the HUB Port respectively.


[FX TYPE]

1

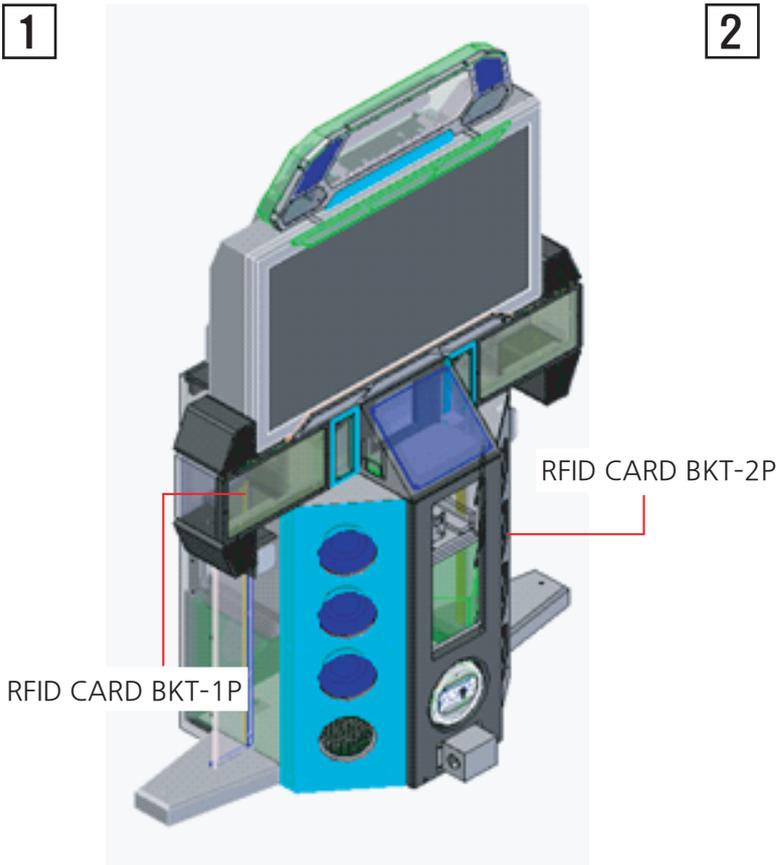

- Location of PUMP RFID Card BKT.

2

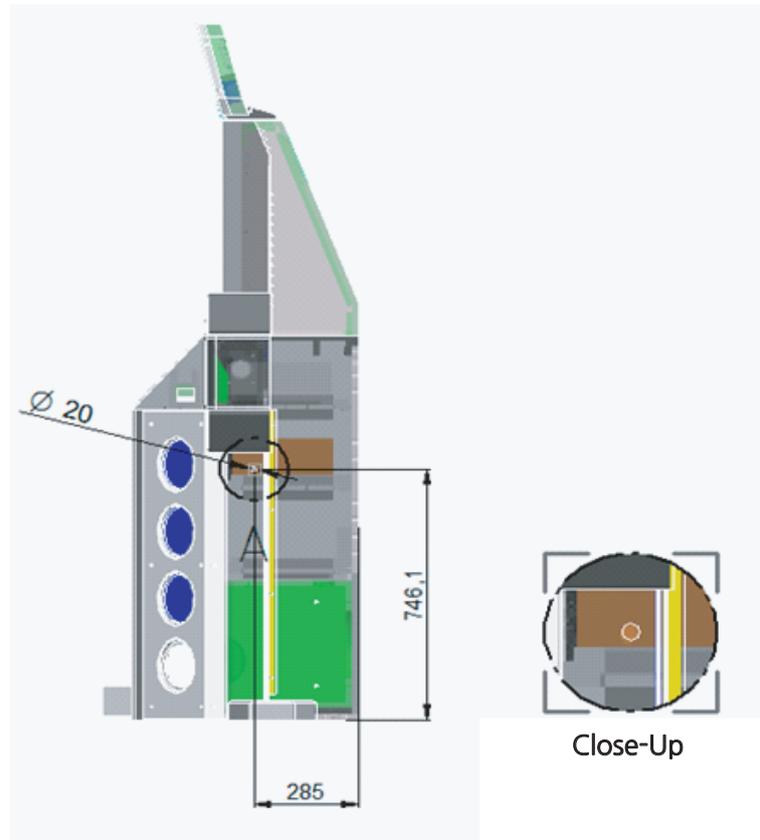


- Make a hole for USB Cable and then install the BKT.

* Sequence of installation & Precautions


- 1) Be sure to work after turning the power off.
- 2) Be sure to secure sufficient working space and block the approach of people other than worker.
- 3) Before making the side hole, be careful with the internal electric wires not to be damaged.
- 4) Before making the side hole, double-check the location of the holes to make.
- 5) Be careful not to damage the machine and not to get injured.
- 6) Be sure to clean up both inside and outside after working.

3

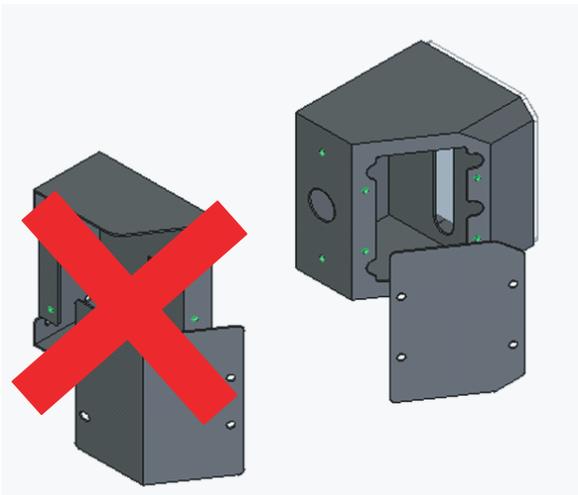


- After removing the cover, assemble the RFID Card BKT to the holes shown in the photo #1
Dismantle the back-side bracket from the bracket included and use only front bracket
In case of existing machines, fix the approximate location due to no indication of assembly point.

4

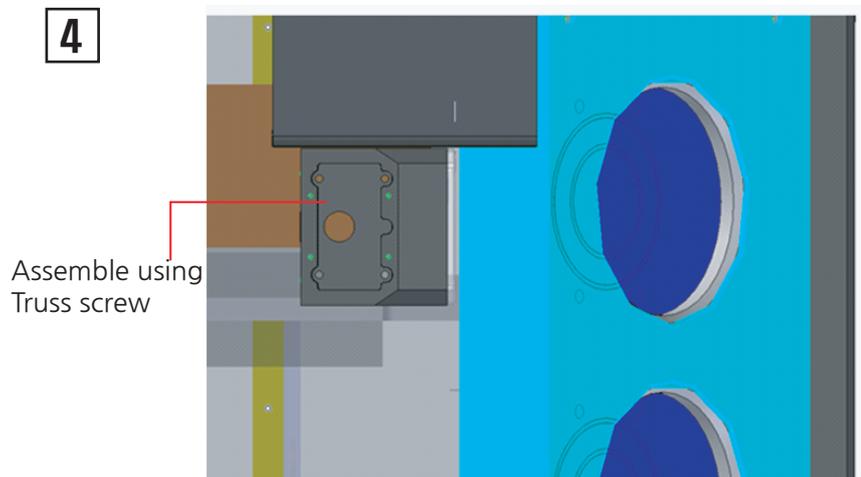

- Assemble the BKT using the bolts included.
#1 : Screw with washer (#8 x 13mm) - 4EA
#2 : Truss screw (M4 x 12mm) - 4EA


5

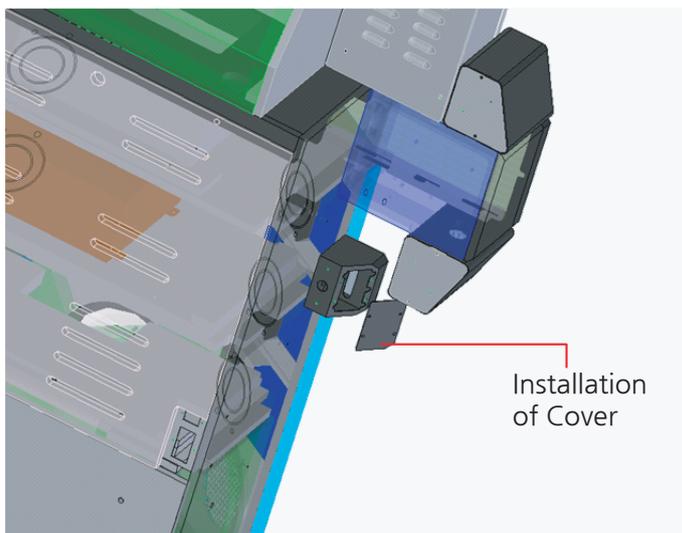

Installation of Cover

- Installation of the Cover BKT.

6

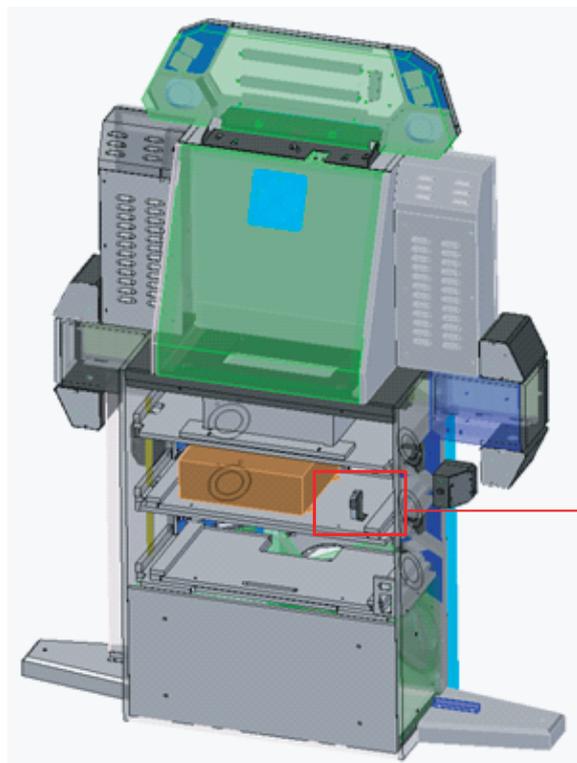


USB HUB Position

- Location to install USB HUB


* Due to no indication of assembly point, fix the approximate location as shown in the photo and assemble the USB HUB using the bolts included (Truss Screw: (M4 x 12mm) - 2ea). Make a hole to put electric wires.

7

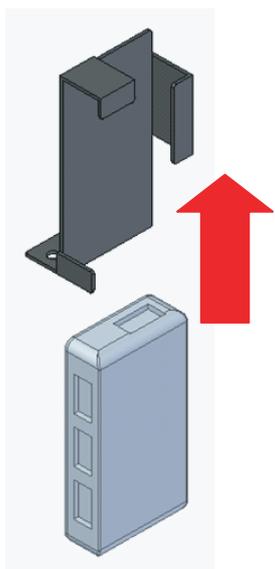

- Install the USB into USB HUB BKT by inserting it to the arrow direction as shown in the photo.

8

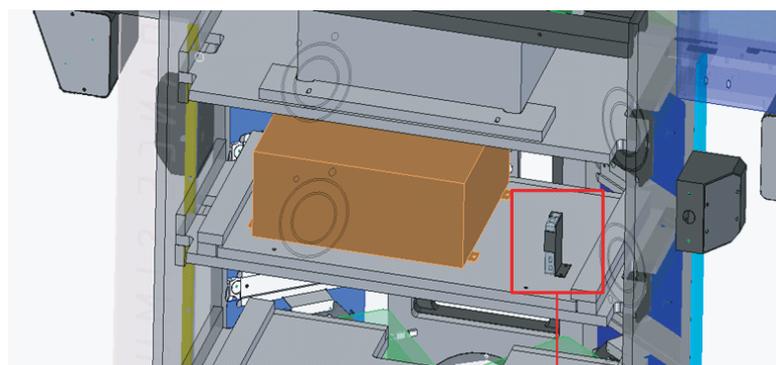

Assemble using TRUSS screw

- Connect the power adaptor included in HUB from outside.
- Connect MK Box and HUB using the USB cable included.
- Connect USB cable of 1P and 2P from RFID Card Reader BKT to the HUB Port respectively.