## KRW4

## **NCT DIP SWITCHES SETTING: (Special Pulse/Parallel)**

## Supported bill **W** 1000, 5000, 10000, 50000

4bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW9	SW10
	Special one pulse mode (Note 1)	OFF	OFF	OFF	OFF						
*	1 Pulse / <del>W</del> 1000	ON	OFF	OFF	OFF						
	2 Pulse / ** 1000	OFF	ON	OFF	OFF						
	3 Pulse / <del>W</del> 1000	ON	ON	OFF	OFF						
	4 Pulse / +W-1000	OFF	OFF	ON	OFF						
	5 Pulse / W 1000	ON	OFF	ON	OFF						
	6 Pulse / <del>W</del> 1000	OFF	ON	ON	OFF						
	7 Pulse / <del>W</del> 1000	ON	ON	ON	OFF						
	8 Pulse / <del>W</del> 1000	OFF	OFF	OFF	ON						
	9 Pulse / <del>W</del> 1000	ON	OFF	OFF	ON						
	10 Pulse / <del>W</del> 1000	OFF	ON	OFF	ON						
	11 Pulse / <del>W</del> 1000	ON	ON	OFF	ON						
	12 Pulse / <del>W</del> 1000	OFF	OFF	ON	ON						
	13 Pulse / <del>W</del> 1000	ON	OFF	ON	ON						
	14 Pulse / ** 1000	OFF	ON	ON	ON						
	15 Pulse / W 1000	ON	ON	ON	ON						
*	Accept ₩ 1000					ON					
	Reject W 1000					OFF					
*	Accept ₩ 5000						ON				
	Reject W 5000						OFF				
*	Accept ₩ 10000							ON			
	Reject ₩ 10000							OFF			
*	Accept ₩ 50000								ON		
	Reject ₩ 50000		-						OFF		
	Fast output Pulse Lo= 50ms Hi=100ms Fast output Para										
*	Slow output Pulse Lo=100ms Hi = 200ms Slow output Par	allel 12	0ms							OFF	Ш
*	Pulse Mode										ON
	Parallel Mode										OFF

(★) Manufacture setting

Note: Please reset the bill acceptor after set the dip switch.

(Note 1): 1 Pulse/ 1000 KRW

1 Pulse/ 5000 KRW

1 Pulse/10000 KRW

1 Pulse/50000 KRW

In mode, only one dipswitch (SW5/SW6/SW7/SW8) can be on; otherwise, banknotes will be rejected.