

► COMMON SHEET\_PRINT

NO	PART NO	ITEM	QTY
1	ATTO0ACP005	FRONT MAIN FRAME L ACR	1
2	ATTO0ACP006	FRONT MAIN FRAME R ACR	1
3	ATTO0ACP010	TARGET MAIN FRAME L ACR	1
4	ATTO0ACP011	TARGET MAIN FRAME R ACR	1
5	ATTO0ACP014	FRONT MAIN FRANE LINEAR L ACR	1
6	ATTO0ACP015	FRONT MAIN FRANE LINEAR R ACR	1
7	ATTO0ACP017	BACKBOARD COVER PET	1
8	ATTO0ACP018	BILLBOARD FND COVER ACR	1
9	ATTO0ACP019	BILLBOARD PC	1
10	ATTO0ACP020	FRONT CASE BUTTON COVER ACR	1
11	ATTO0ACP021	PLAYER TURN LED COVER ACR	1
12	ATTO0ACP022	SPEAKER COVER ACR	2

COMMON SHEET_PRINT			
1	2	3	4

► COMMON SHEET

A1	MTTO0SHE028	SETUP PANEL SHEET	1
A2	MTTO0SHE029	LCD PANEL SHEET	1
A3	MTTO0SHE030	POWER BOX SHEET L	1
A4	MTTO0SHE031	POWER BOX SHEET R	1
A5	MTTO0SHE034	TARGET SENSOR SHEET A	1
A6	MTTO0SHE035	TARGET SENSOR SHEET B	1
A7	MTTO0SHE036	TARGET SENSOR SHEET C	1
A8	MTTO0SHE037	BILLBOARD DECO TITLE	1
A9	MTTO0SHE038	TARGET SHEET A-1	1
A10	MTTO0SHE039	TARGET SHEET A-2	1
A11	MTTO0SHE040	TARGET SHEET B-1	1
A12	MTTO0SHE041	TARGET SHEET C-1	1
A13	MTTO0SHE042	BALL BLOCK DECO SHEET	1
A14	MTTO0SHE043	PLAY GROUND TITLE SHEET	1
A15	MTTO0SHE044	HOW TO PLAY SHEET	1
A16	MTTO0SHE045	FRONT SHEET	1
A17	MTTO0SHE046	FRONT DOOR SHEET L	1
A18	MTTO0SHE047	FRONT DOOR SHEET R	1
A19	MTTO0SHE048	COIN COVER SHEET 1P	1
A20	MTTO0SHE049	BILL COVER SHEET 1P	1
A21	MTTO0SHE050	COIN COVER SHEET 2P	1
A22	MTTO0SHE051	BILL COVER SHEET 2P	1
A23	MTTO0SHE052	SIDE GUARD DECO SHEET L	1
A24	MTTO0SHE053	SIDE GUARD DECO SHEET R	1
A25	MTTO0SHE054	TARGET SIDE SHEET L	1
A26	MTTO0SHE055	TARGET SIDE SHEET R	1
A27	MTTO0SHE056	BUTTON SHEET 1P	1
A28	MTTO0SHE057	BUTTON SHEET 2P	1

COMMON SHEET			
A1	A2	A3	A4