




► COMMON SHEET_PRINT

NO	PART NO	ITEM	QTY
1	ASBT0ACP001	BALL LIFT SCREW SCORE FND COVER_PRI	2
2	ASBT0ACP002	BALL LIFT SCREW SUPER BONUS COVER_PRI	2
3	ASBT0ACP004	BALL SCREW PIPE UPPER_L_PRI	2
4	ASBT0ACP005	BALL SCREW PIPE UPPER_R_PRI	2
5	ASBT0ACP006	BILLBOARD SPEAKER COVER_PRI	2
6	ASBT0ACP007	BILLBOARD BLS TOP COVER_PRI	2
7	ASBT0ACP008	BILLBOARD CENTER DECO_L_PRI	2
8	ASBT0ACP009	BILLBOARD CENTER DECO_R_PRI	2
9	ASBT0ACP010	BILLBOARD DECO_L_PRI	2
10	ASBT0ACP011	BILLBOARD DECO_R_PRI	2
11	ASBT0ACP012	BILLBOARD SIDE POP COVER_PRI	2
12	ASBT0ACP013	BILLBOARD TITLE COVER_PRI	2
13	ASBT0ACP014	CABINET BUTTON LED COVER_PRI	2
14	ASBT0ACP015	CONTROL PANEL COVER_PRI	1
15	ASBT0ACP016	PLAYFIELD CENTER COVER_PRI	2
16	ASBT0ACP019	TRAIN HEAD FRONT BKT_PRI	2
17	ASBT0ACP020	TRAIN HEAD SIDE _L_PRI	2
18	ASBT0ACP021	TRAIN HEAD TOP _L_PRI	2
19	ASBT0ACP022	TRAIN HEAD TOP _R_PRI	2
20	ASBT0ACP023	TRAIN SIDE ACRYL_A_PRI	2
21	ASBT0ACP024	TRAIN SIDE ACRYL_B_PRI	2
22	ASBT0ACP025	TRAIN SIDE ACRYL_C_PRI	2
23	ASBT0ACP026	TRAIN SIDE ACRYL_D_PRI	2
24	ASBT0ACP027	TRAIN SIDE ACRYL_E_PRI	2
25	ASBT0ACP028	TRAIN SIDE ACRYL_F_PRI	2
26	ASBT0ACP029	TRAIN SIDE ACRYL_G_PRI	2
27	ASBT0ACP030	TRAIN SIDE ACRYL_H_PRI	2
28	ASBT0ACP031	TRAIN SIDE ACRYL_I_PRI	2
29	ASBT0ACP032	UPPER RAIL LED COVER_L_PRI	2
30	ASBT0ACP033	UPPER RAIL LED COVER_R_PRI	2
31	ASBT0ACP034	UPPER RAIL LED DISPLAY _L_PRI	2
32	ASBT0ACP035	UPPER RAIL LED DISPLAY _R_PRI	2
33	ASBT0ACP036	UPPER RAIL SENSOR COVER_PRI	2
34	ASBT0ACP037	TRAIN BALL CHECK UPPER LED COVER_PRI	2
35	ASBT0ACP038	TRAIN HEAD SIDE _R_PRI	2
36	ASBT0ACP039	TRAIN HEAD FRONT _R_PRI	2
37	ASBT0ACP043	CONTROL PANEL FRONT BKT_PRI	1
	→ INT, UK		
A1	ASBT0ACP003	BALL LIFT SCREW TRAIN LED COVER_PRI	2
A2	ASBT0ACP040	BALL LIFT SCREW TRAIN LED COVER_01	2
	→ CEC		
B1	ASBT0ACP041	BALL LIFT SCREW TRAIN LED COVER	2
B2	ASBT0ACP040	BALL LIFT SCREW TRAIN LED COVER_01	2

COMMON SHEET_PRINT			
1	2	3	4
			
			
			
			
			
			
			
			
			
			
INT, UK			
A1	A2		
			
CEC			
B1	B2		
			

► COMMON SHEET

C1	MSBT0SHE001	FRONT DOOR_01_SHE	2
C2	MSBT0SHE002	FRONT DOOR_02_SHE	2
C3	MSBT0SHE003	FRONT DOOR_03_SHE	2
C4	MSBT0SHE004	FRONT DOOR_04_SHE	2
C5	MSBT0SHE005	FRONT DOOR_05_SHE	2
C6	MSBT0SHE006	FRONT DOOR_06_SHE	2
C7	MSBT0SHE007	SIDE DOOR_01_SHE	2
C8	MSBT0SHE008	SIDE DOOR_02_SHE	2
C9	MSBT0SHE009	BALL LIFT SCREW SIDE COVER_SHE	2
C10	MSBT0SHE010	BUTTON_SHE	2
C11	MSBT0SHE013	HOW TO PLAY STICKER	2
C12	MSBT0SHE014	PLAYFIELD INNER COVER _L_SHEET	2
C13	MSBT0SHE015	PLAYFIELD INNER COVER _R_SHEET	2
C14	MSBT0SHE018	HOW TO PLAY SHEET (POINT)	2
	→ OPTION		
D1	MSBT0SHE011	BALL LIFT SCREW TRAIN LED COVER STICKER	2
D2	MSBT0SHE021	TRAIN SIDE STICKER_ME	2
D3	MSBT0SHE019	BALL LIFT SCREW TRAIN LED COVER STICKER_CEC	2
D4	MSBT0SHE020	BALL LIFT SCREW TRAIN LED COVER STICKER_EU	2

COMMON SHEET			
1	2	3	4
OPTION			
F1			