

HOW TO INSTALL [COIN & CARD]

1



- Using by 7001 key, open 1~2P front door and then take out coins after open the coin box using by 6001 key.

2



- Detach the cover after unlocking bolts in front and side of elevator hopper cover.
- Put 850 medals each for 1P ~ 2P in Front Hopper.

*** If you lack a medal, supply 150 medals.**

3



- Then, push select button among SET UP buttons and perform Perform by pushing Select button as OPERATION MENU / PLAYFIELD SETUP / TABLE SET.A in order.

4



- After selecting 1P ~ 2P PLAYER, supply 1000 coins to PUSHER BASE PANEL by Hopper.

5



- Then, put some of cards, which is included in Accessart Part, onto CARD DISPENSER and then lay H frame to fix it.

6



- Complete the supply of coins and cards as like picture 6.
- * On initial setting, put some of cards onto PUSHER BASE PANEL then finish the setting.

7



- On column 6, Set 10~12 cards above coins supplied on PUSHER BASE PANEL as like the picture.
- Then, maintain 8~10 cards on playing.

* 150EA coins inside of extra packing is spare coins when there is shortage.

Please follow the line as the picture when you insert coins to HOPPER.

It may cause the problem on operation if you don't follow the above.

[TILT REMOVAL]

- * TILT ASS'Y is located on the right side if you open the front door side top of 2P case.



- Tilt Alarm : Using Nipper (or similar tools), please cut off the tie around Tilt Alarm.

* In case tilt location is not balanced after installation, please adjust it to locate on the center by moving