


The Redeem Machine™ is Andamiro's new self-service kiosk that automates the checkout of such physical redemption items as collectible cards, character coins and colored chips. Proper integration with industry-standard debit card systems is an essential function of the Redeem Machine and ensures that ticket values are accurately transferred to players' accounts. This quick installation manual shows how to connect and set debit card readers to the kiosk.

DEBIT CARD READER INSTALLATION GUIDELINES

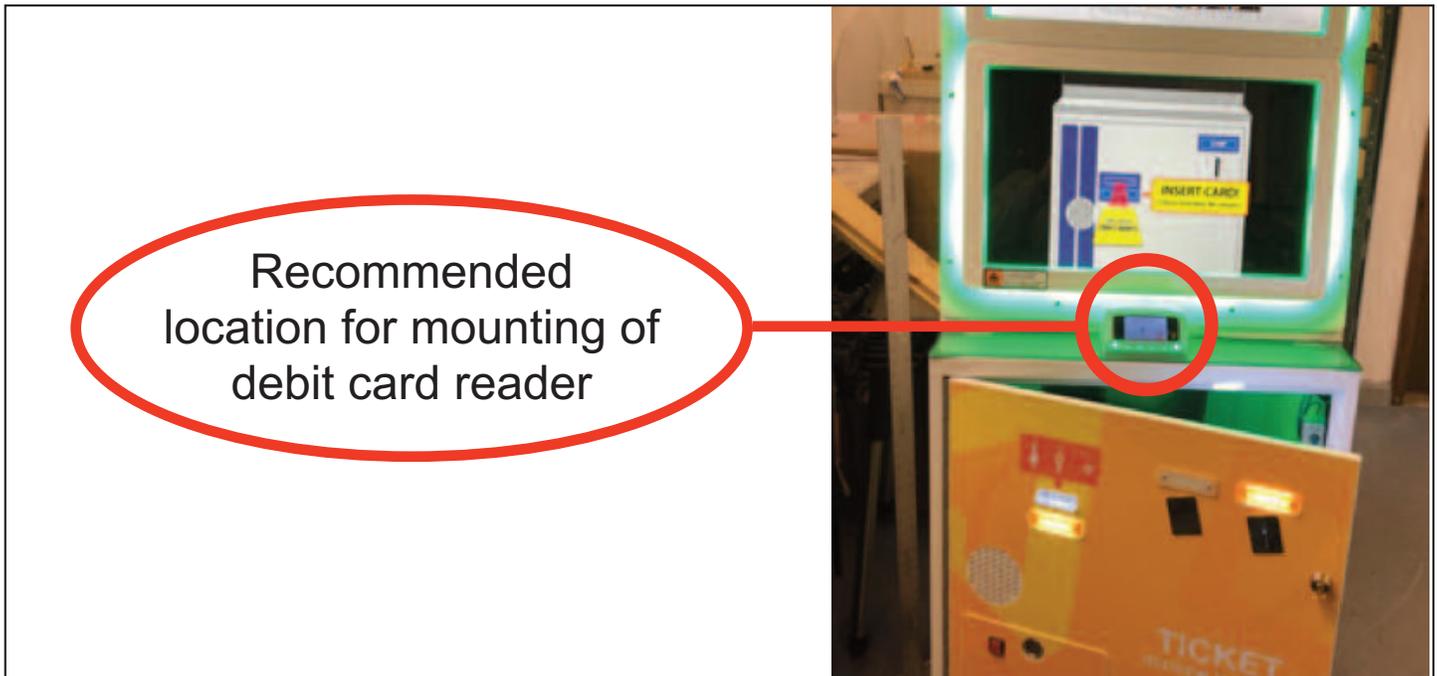

CARD READER INSTALL GUIDELINES

1. CARD SYSTEM (OPTION 1: USE CARD/COIN SIGNAL WIRE)


1) SET UP → GENERAL MODE

- » CARD SYSTEM : ON
- » E-TICKET : ON
- » CARD SYSTEM IMAGE : OFF


Redeem Machine Settings Manual

2) WIRING METHOD

- » CARD SIGNAL WIRE (BROWN) AND GROUND (BLACK) MUST BE WIRED
- » BROWN WIRE – COIN IN SIGNAL (OUT)
- » BLACK WIRE – GROUND
- » YELLOW WIRE – 12V (MAX. CURRENT 3A, RECOMMENDED 2A)

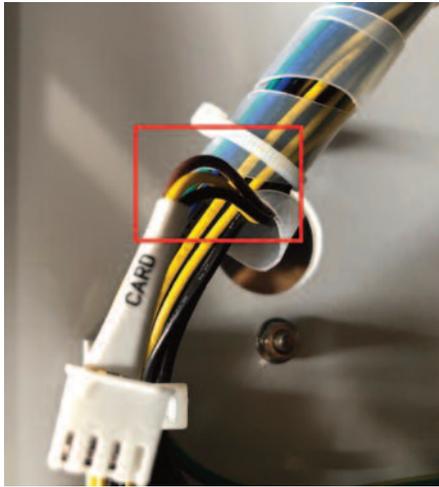

- » WIRE #1 TICKET GAME ONLY (DO NOT WIRE TICKET DISPENSER)
- » BROWN WIRE – TICKET RELEASE SENSOR SIGNAL (OUT)
- » BLACK WIRE – GROUND
- » GREEN WIRE – TICKET MOTOR SIGNAL
- » YELLOW WIRE – 12V

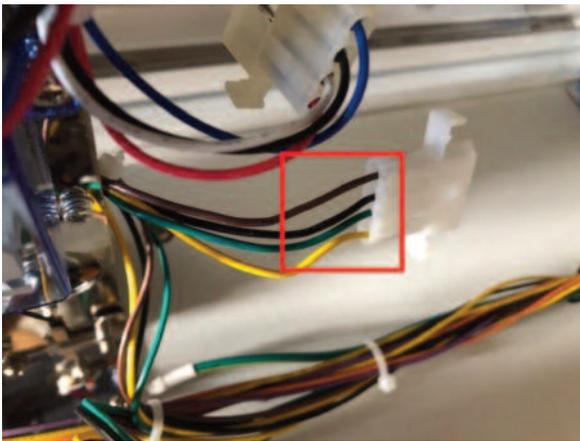

3) SEQUENCE

- » ID CARD SWIPE > INSERT ITEM CARD > RELEASE TICKET

2. CARD SYSTEM (OPTION 2: DO NOT USE CARD/COIN SIGNAL WIRE)

1) SET UP → GENERAL MODE



- » CARD SYSTEM : OFF
- » E-TICKET : ON
- » CARD SYSTEM IMAGE : ON

2) WIRING METHOD

- » ONLY WIRE 12V WIRE (YELLOW) AND GROUND (BLACK)
- » WIRE #1 TICKET GAME ONLY (DO NOT WIRE TICKET DISPENSER)

3) SEQUENCE

- » INSERT ITEM CARD > ID CARD SWIPE > RELEASE TICKET

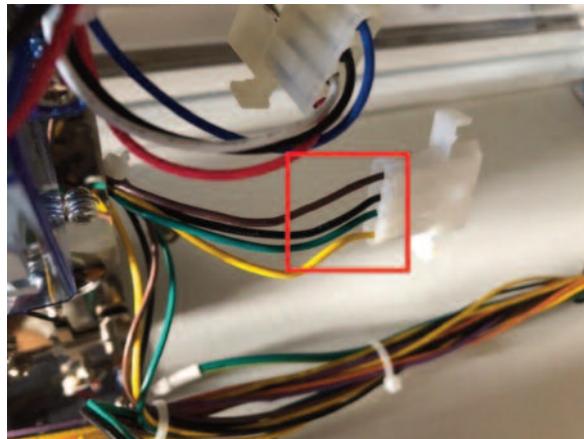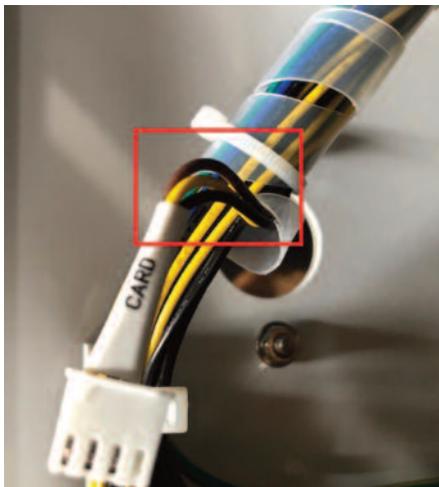


3. PAPER TICKET (OPTION 3: DO NOT USE CARD SYSTEM)

1) SET UP → GENERAL MODE

- » CARD SYSTEM : OFF
- » E-TICKET : OFF
- » CARD SYSTEM IMAGE : OFF

2) WIRING METHOD

- » WIRE BOTH #1 AND #2 TICKET DISPENSERS

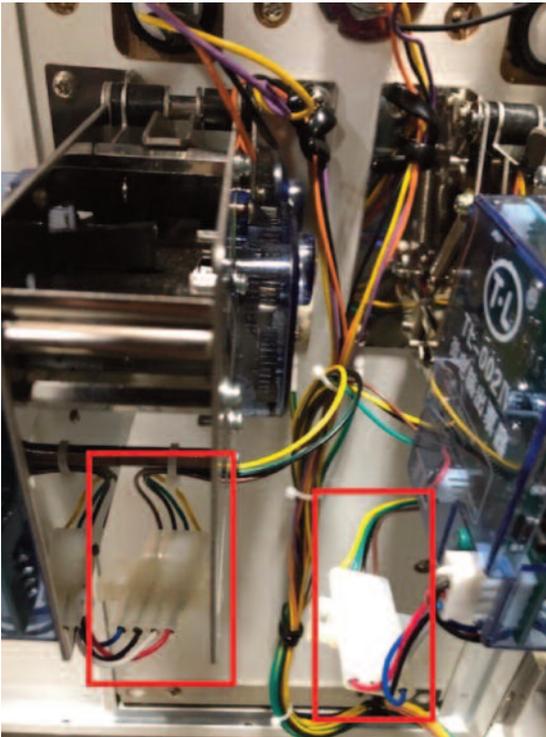


3) SEQUENCE

- » INSERT ITEM CARD > RELEASE TICKET




EMBED CARD READER TICKET SETTING (RECOMMENDED)

1. General

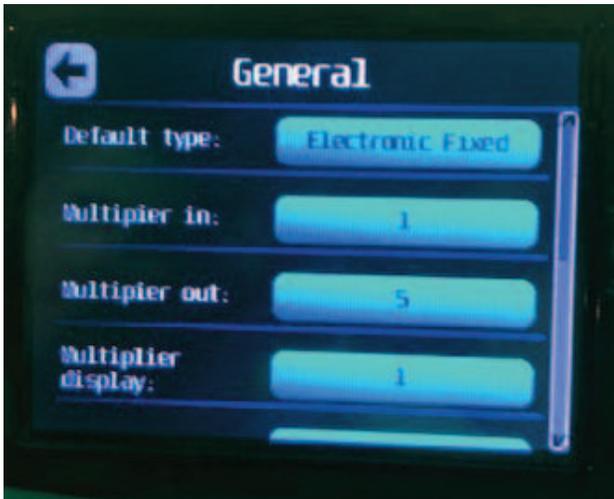

2. Emulation

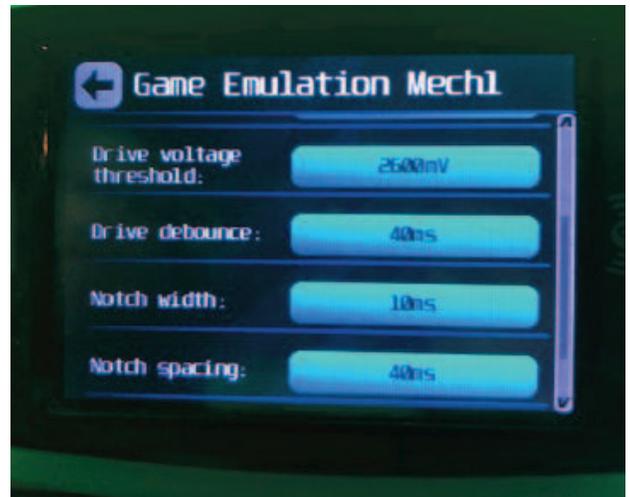

INTERCARD READER TICKET SETTING (RECOMMENDED)

» TICKET MAX PAYOUT : 15,000

PULSE WIDTH : 2

YOUR BARCODE SETTING


GO TO SETTINGS > PROGRAM SETTINGS > DATA MANAGEMENT > CARD BARCODE



CHOOSE THE CARD IMAGE

USE THE SETTINGS ARROW TO MOVE TO LEFT OR RIGHT

002000101001

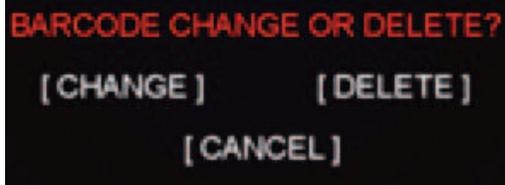

[CHANGE] : CHOSE TO CHANGE BARCODE
[DELETE] : DELETE CURRENT BARCODE
[CANCEL] : CANCEL IT GO TO PREVIOUS MENU



INSERT THE CARD WITH NEW BARCODE
[CANCEL] : CANCEL IT GO TO PREVIOUS MENU




[CONFIRM] : CONFIRM THE NEW BARCODE
[CANCEL] : CANCEL IT GO TO PREVIOUS MENU

YOUR RFID CARD SETTING

GO TO SETTINGS > PROGRAM SETTINGS > DATA MANAGEMENT > RFID

STORE CODE : [NONE]	KEY IN YOUR STORE CODE
CARD WRITE	

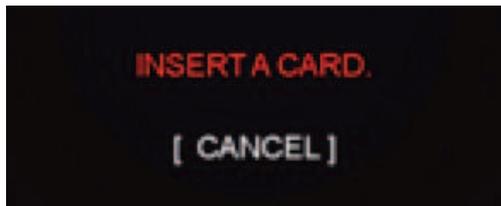

INSERT THE RFID CARD WITH STORE CODE