


HOW TO INSTALL BILLBOARD & SIDE PANEL

* 30 BALLS are in the elevator.

1

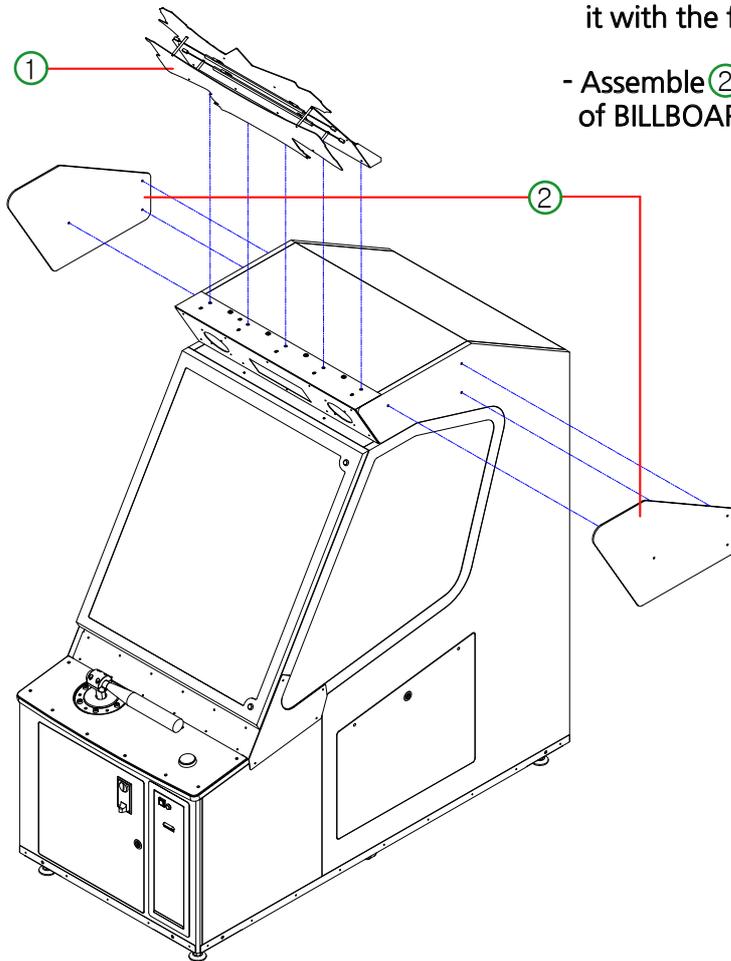

- Put ① BILLBOARD ASS'Y on top of cabinet and assemble it with the fixed bolts [M6 Bolts, 5EA]

- Assemble ② UPPER SIDE DECO ACRYL-L, R on left and right of BILLBOARD UPPER SIDE [EACH M6 Bolts, 3EA]

2



- You complete it like picture.