



INSTALLATION

[DECO ACRYLIC 1, 2P]


1

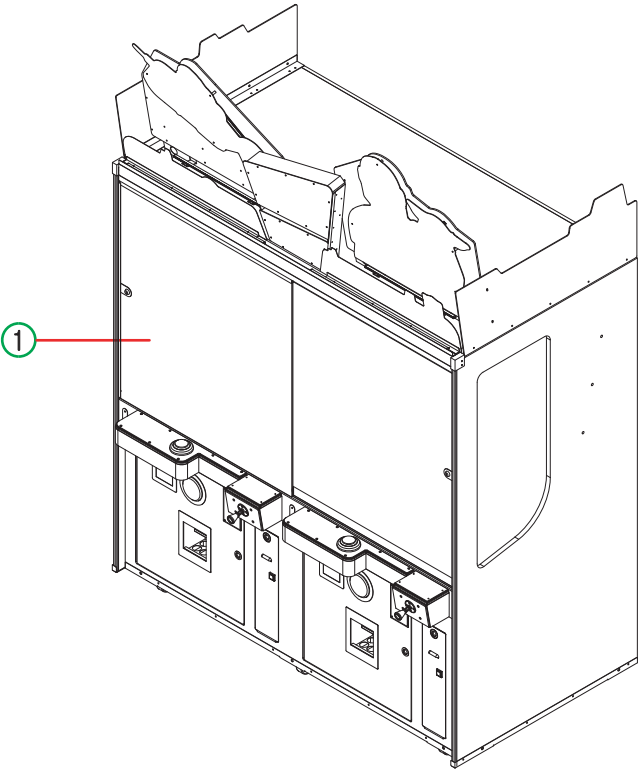

2

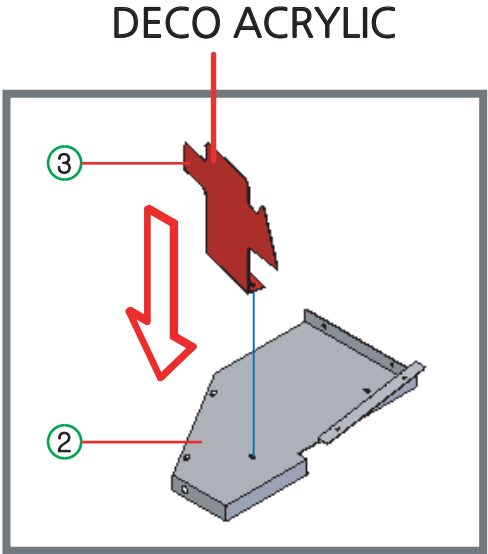


3

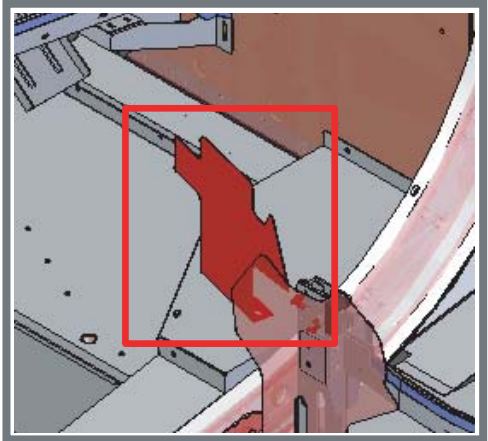

NO	PROCESS	EXPLANATION	BOLT
1	OPEN	DOOR L, R OPEN - Use 7001 key	
2	-	PUSHER PANEL COVER	
3	ASSEMBLY	BALL SHOOT GAME DECO ACRYL 1 point (1, 2P same) * When assembling bolts, assemble according to the direction of the long hole.	Use existing bolts

4

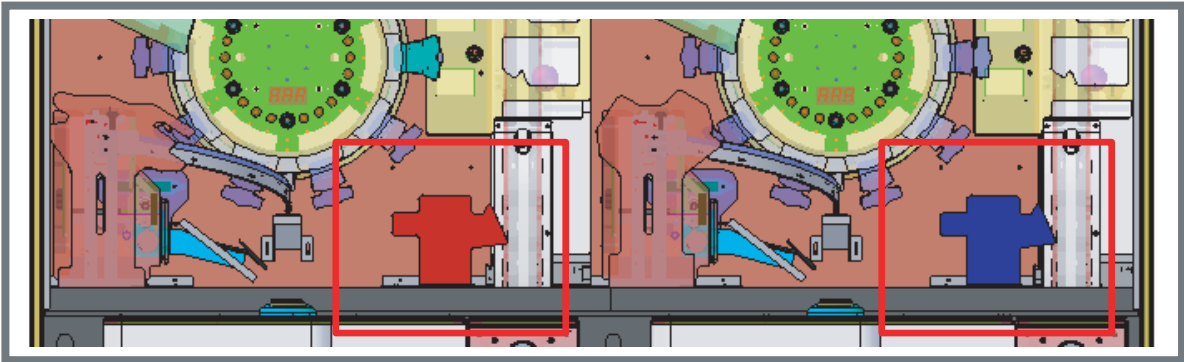

- Installation is completed as shown in pictures 1 and 2P.